


Box Chain Bracelet

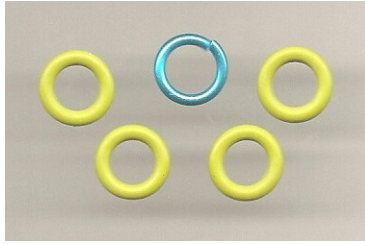

1. Use one jump ring and pick up 4 orings

Supplies:

10mm Orings 70 to 80

16 gauge 1/4" Jump rings 70 to 80

Tools: 2 prs flat nose pliers



2. Add a second jump ring through the 4 orings



3. Take one pair of orings and fold them back toward the other pair of orings.



4. Insert a jump ring between the first jump rings and under the orings that have been folded back. Before closing the jump ring, pick up 2 new orings.

5. Add a second jump ring into this pattern the same way, between the jump rings, under the orings and through the 2 new orings that were added.

6. Fold back the 2 new orings as you did in step 3.

7. Repeat step 4-6 until bracelet is desired length.



8. Finishing the chain is the hardest part and may take a few tries. Add final jump ring as in step 4 but this time push the ring between the 2 free orings from the beginning end and each side of the jump ring needs to go through the holes of the orings and back to the outside. You are working on the pattern sideways.

Roll patten to the other side and do the same with a second jump ring.